


ComfortQuest Ground Blind Frame Kit

Model SW4x4-GB



Ground Blind Frame Kit Components

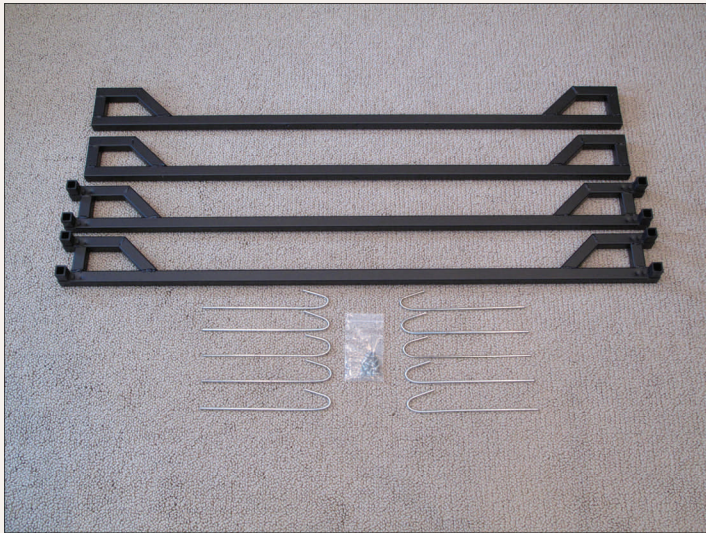

Assembled Ground Blind Frame



Friction Fit Nylon Connectors



Accommodates ComfortQuest Hunting Blind frame corner bases (supplied w/ SW4x4 Blind / Frame package)

Includes:

- *Lightweight 4' x 4' Aluminum Frame*
- *Ten (10) Ground Stakes*
- *Eight (8) SEMS Screws for attaching the ComfortQuest Hunting Blind Corner Bases*

Setup:


- *Easy assembly with friction fit connectors*
- *Accommodates ComfortQuest Hunting Blind frame corner bases (supplied with SW4x4 Blind / Frame package)*
- *Up to (10) Ground Stakes are used to secure the frame and blind in place*

Model SW4x4-GB Ground Blind Frame Kit - Assembly Instructions

Step 1

Remove the Ground Blind Frame from the packaging. Make sure you have the following components: (refer to photo at right for help identifying each piece)



- A (2) - 46" x 1" x 1" Frame Sections (*with no connectors attached*)
- B (2) - 46" x 1" x 1" Frame Sections (*with right angle nylon fittings attached to each end*)
- C (10) - 10" Ground Stakes
- D (1) - Hardware Package (*Includes (10) 1/4 - 20 x 1/2" SEMS Screws (includes two spares)*)

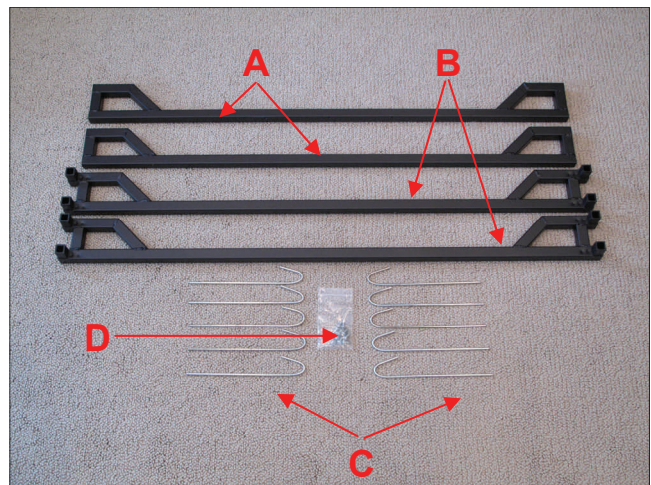

Step 2

Assemble the frame as shown. The frame uses the friction fit nylon connectors. No tools are necessary.

Friction Fit Connectors

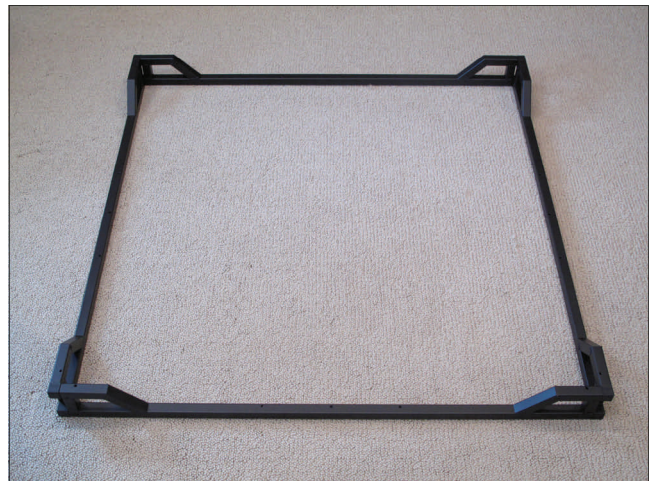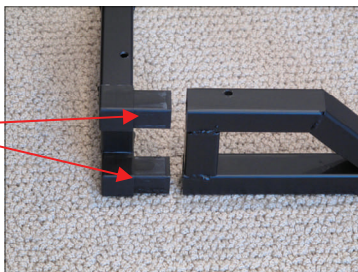

Step 3

Using (8) 1/4-20 SEMS screws, Install the (4) frame corner bases as shown. (corner bases are included with the SW4x4 Blind / Frame package and not included with this kit)

Frame Corner Base



Step 4

Install the remainder of the blind frame as per the instructions included with the SW4x4 ComfortQuest Blind / Frame Package.

Install (4) of the grounds stakes into the ground blind frame. One stake in each of the four frame sections and up to (6) ground stake into the fabric blind D-rings